This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

## **Device Specifications:**

| Device Type:      | Satellite Receiver |
|-------------------|--------------------|
| Manufacturer:     | Elium              |
| Firmware Version: | 1.01.43            |
| Model(s):         | HDR 1080 Movie NET |

## Minimum Software and Firmware Requirements:

| IP Link<br>Compiler | IP Link<br>Firmware | GC Version |
|---------------------|---------------------|------------|
| 1.5.1               | 1.15                | 3.3.1      |

## Version History:

| Driver<br>Version | Date       | Notes                                |
|-------------------|------------|--------------------------------------|
| 2                 | 04/23/2012 | Fixed status due to Firmware update. |
| 1                 | 11/8/2011  | Initial version.                     |

#### **Driver Notes:**

Driver only works with the unit firmware version 1.01.43. Query Status must be Enabled to activate polling/status.

## Control Commands & States:

| Channel TV (Step)      | Up     | Down        |          |
|------------------------|--------|-------------|----------|
| Executive Mode*        | Mode 1 | Mode 2      | Mode 3   |
|                        | Mode 4 |             |          |
| Freeze                 | On     | Off         |          |
| IR Remote Emulation    | 0 - 9  | Audio-Video | OK       |
|                        | Menu   | Exit        | Down     |
|                        | Up     | Right       | Left     |
|                        | Text   | Info        | Last     |
|                        | EPG1   | Record      |          |
|                        | MP3    | DVR         | TV/RADIO |
|                        | Zoom   | On/Off      | Mute     |
|                        | PIP    | EPG2        | Freeze   |
| Keypad                 | 0 – 9  | Enter       | Return   |
|                        | Clear  |             |          |
| Menu Navigation        | Menu   | Exit        | Up       |
|                        | Left   | Right       | Down     |
|                        | Select |             |          |
| Mode                   | TV     | Radio       |          |
| Movie Browser          | On     | Off         |          |
| Mute                   | On     | Off         |          |
| Power Control          | On     | Off         |          |
| Query Enable           | Enable | Disable     |          |
| Record                 | Start  | Stop        |          |
| Transport              | Play   | Pause       | FFwd     |
|                        | Rew    | Start       | Middle   |
|                        | End    |             |          |
| Tuner Frequency (Step) | Up     | Down        |          |

# IP Link<sup>®</sup> Device Interface Ethernet Communication Sheet

| Con't             | -                      |      |
|-------------------|------------------------|------|
| Volume (Discrete) | 0 to 100 in steps of 1 |      |
| Volume (Step)     | Up                     | Down |

\*Executive Mode 1: Locks Front Panel, Mode 2: Unlocks Front Panel, Mode 3: Locks IR, and Mode 4: Unlocks IR.

## Status Available:

| Connection Status | Connected              | Disconnected |
|-------------------|------------------------|--------------|
| Mode              | TV                     | Radio        |
| Channel           | Channel Number         |              |
| Power Control     | On                     | Off          |
| Volume (Discrete) | 0 to 100 in steps of 1 |              |

## Network communication:

When configuring the Ethernet driver, be sure device settings match that of the GC configuration.

| Port Type:                      | Ethernet |
|---------------------------------|----------|
| Logon Credentials<br>Supported: | No       |
| Default Port:                   | 26       |
| Multi-Connection<br>Capable:    | Yes      |
| Port Changeable:                | No       |

## Ethernet Driver Configuration Description:

Please refer to user manual for settings and changes to the network communication parameter.

Notes for the Device: